



# Thru Axle Fitment Guide: A4

By: The Robert Axle Project

- 1) Print this sheet to actual size (do not scale or “fit to page”). Verify the accuracy of the scale below with a ruler.
- 2) Determine your axle thread pitch by holding up the threads on your axle to the examples below.
- 3) Measure your axle to determine the length.
- 4) With your thread pitch and length, choose the axle you need from the table.

Thread Pitch:               

12 x 1.0                      12 x 1.5                      12 x 1.75

Place axle here to measure length.

Axle Length	Thread Pitch	Reference
Between 154 and 172 mm	1.0	ZYC213
Between 154 and 172 mm	1.5	ZYC204
Between 172 and 178 mm	1.5	ZYC214
Between 167 and 174 mm	1.75	ZYC201
Between 174 and 180 mm	1.75	ZYC211